

PURGE KIT

P/N 50C-0068-1 (Commercial Systems) P/N 50C-0068-2 (Military Systems)



The Purge Kit, coupled with an adequate supply of gas, removes moisture from cryogenic vessels, system lines, valves and their components. Can be used with pure gaseous nitrogen, oxygen or air. Adapters and hoses can be designed to fit specific applications upon request.

DIMENSIONS (W" x L" x H")	18.5 x 14 x 7
WEIGHT	18 lbs
HEATER OUTLET TEMPERATURE	250° F ± 20 ° F
SAFETY BURST DISC PRESSURE	150 ± 10 PSIG
INLET FLOW & PRESSURE	100 LPM at 55 PSIG
POWER	110 Volts ac, 60 hz
OUTLET CONNECTION	CRU-59/E or ALOX
SUPPLY CONNECTION	37 Degree Flare Fitting

HIGH PRESSURE FILL KIT

P/N 50C-0110-1 | NSN 3655-01-614-1496




The High Pressure Fill Kit connects the OGL or OGS with a high pressure oxygen compressor to fill high pressure cylinders with 93% USP oxygen. The kit includes a 20' low pressure oxygen hose and a 4' high pressure braided hose with a relief valve, manual vent valve and pressure gauge. The high pressure oxygen compressor is not included. Items are packaged in a protective storage case.

Accessories

- One (1) 20' Medical Hose
- One (1) 4' High Pressure Hose Assembly
- One (1) CGA 540 Connection
- One (1) CGA 870 Yoke Connection

DIMENSIONS (W" x L" x H")	18.5 x 14 x 7
WEIGHT	12 lbs
RELIEF VALVE SETTING	75 PSIG
SAFETY BURST DISC PRESSURE	150 ± 10 PSIG
INLET FLOW & PRESSURE	0 to 25 PSIG

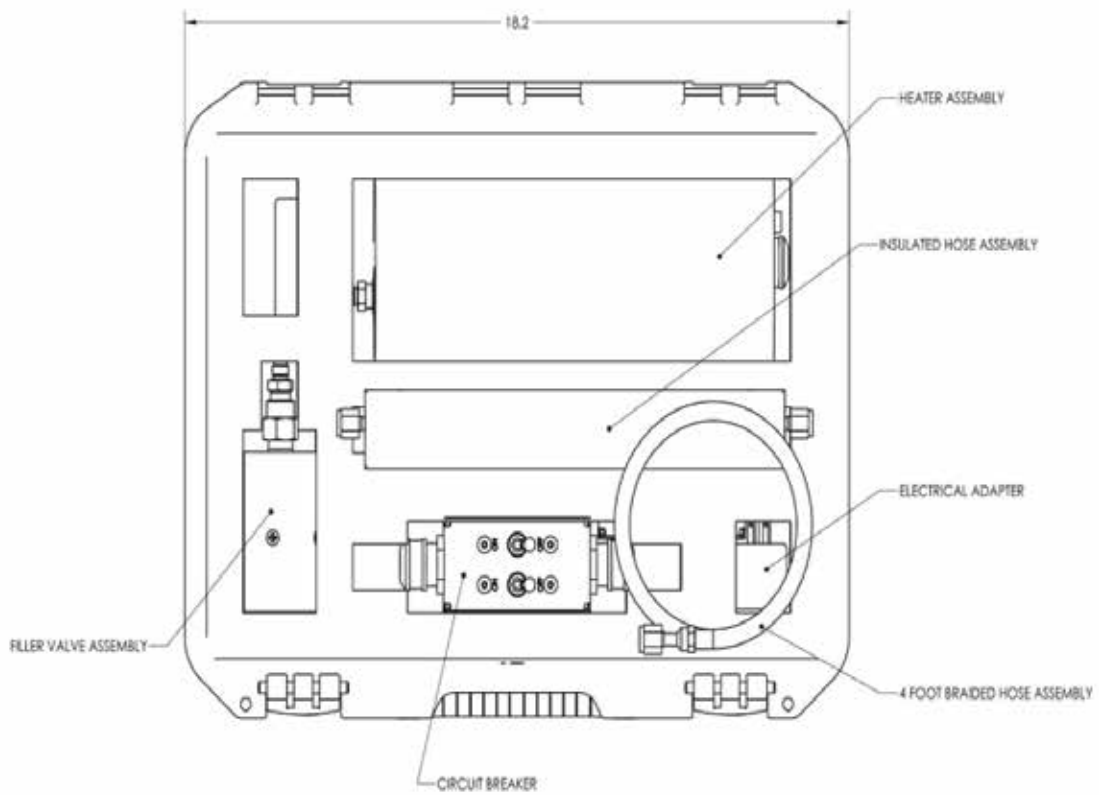

LID REMOVED TO SHOW COMPONENTS

